RTX 2176 REPEATER




Transceiver for the reception and transmission of codes (12-18

Bit or Rolling Code) for the centralised control of sun blinds and

rolling window shutters; it can be perfectly integrated with all electronic control units and receivers.

TECHNICAL D	A TA
IECHNICAL D	AIA

- Power supply	230V~ 50/60Hz
- Operating frequency	433.92 MHz
- Max consumption	9 mA (in stand-by).
- Operating temperature	-20 ÷ 70 °C
- Op transmitter.	12-18 Bit or Rolling Code
- TX stored codes	64
- Dimensions	96x56x30 mm (plug not included).
- Container	ABS V-0.
- Protection degree	IP 40.

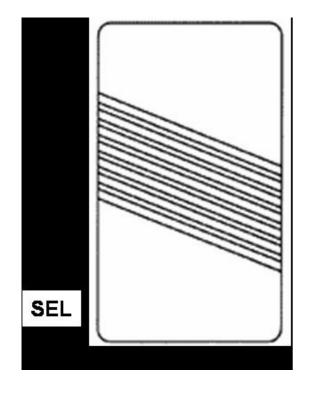

The control unit programming can be enabled by pressing the "SEL" key.

When the SEL key is pressed, the control unit emits three beeps to confirm the programming mode entry; press the key of

the radio control to program continuously for 5 seconds, and the

control unit will emit a confirmation beep. Repeat the procedure

if you wish to program other keys on this or other radio controls.

15 seconds after the last key was programmed, the control unit

will emit four confirmation beeps to indicate programming is complete.

FURTHER PROGRAMMING

The above programming operations can be repeated to enter further codes - up to a maximum of 64 - in the control unit memory.

If the memory already contains 64 stored codes, when you attempt

the programming procedure, the control unit will emit six confirmation beeps to inform you that the available memory is

full.

RESET WITH THE "SEL" KEY

To delete all transmission codes stored in the memory, do as

follows: press the SEL key continuously for 5 seconds; the control

unit will emit five confirmation beeps to indicate that the operation $% \left({{{\mathbf{x}}_{i}}} \right)$

is complete.

BEEPING SIGNALS

1 BEEP = Radio-control code stored 3 BEEPS = Start of programming phase 4 BEEPS = End of programming phase 5 BEEPS = Radio-control codes stored deleted 6 BEEPS = No more Memory available for new codes FOR THE INSTALLER - IMPORTANT

For the correct operation of the radio receiver, we recommend
you install the device at least 3 metres away from any other transmitters and receivers.

The device can only operate in conjunction with one or more radio-

INITIAL OPERATING CONDITION

controls; it contains no stored radio control codes on first use.	the product below: RTX 2176 Repeater complies with the requirements of Directives R&TTE 99/5/EC,
PROGRAMMING WITH THE "SEL" KEY	EMC 2004/108/EC, LVD 2006/95/EC.