

# RADIO CONTROLL TXX 4

GB


4 channel transmitter with the capability for 12 and 18 bit code transmission and the division of codes for common and personalised command management.

- Mod. **TXQ 4** \*: 30,875 MHz
- Mod. **TX 4** \*: 306 MHz
- Mod. **TX 4/330** \*: 330 MHz
- Mod. **TXS 4**: 433,92 MHz

\* This product is destined only for countries in which its use is allowed

## Technical Data

- Battery power supply: 12VDC (23A)
- Working Frequency: See Model
- Possible code combinations: 262144
- Max. consumption: 25mA
- Working Temperature: -20□70°C
- Dimensions: 45x75x14mm

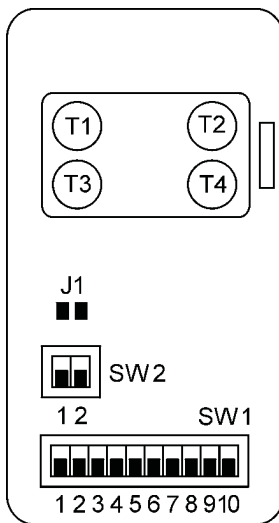

## Description of Functions

The transmitter has 4 buttons for the separate operation of 4 different users.

## Operating Instructions

- a) Standard configuration: T1-T2 12 bit, T3-T4 18 bit.
- b) Configuration with T1-T4 18 bit.
- c) Channel division: 1 common + 3 private.
- d) Channel division: 2 common + 2 private.

### a) Standard configuration T1-T2 12 bit, T3-T4 18 bit.

The transmitter is setup at the factory with the following configuration: SW2 dip 1 and 2 off, Jumper J1 open and buttons T1-T2 12 bit, T3-T4 18 bit.

### b) Configuration with T1-T4 18 bit.

To set-up the transmitter with all buttons generating 18 bit code, connect the two poles of the J1 jumper.

### c) Channel division; 1 common + 3 private.

To set-up the transmitter to generate 1 common code (e.g. for a condominium T1) and 3 private users (T2-T3), set SW2 dip 1 to ON and dip 2 to OFF. As the channel division is type 4+6 the first 4 dip of SW1 are for programming the common code and the remaining 6 dip are for programming the private code.

The set up of buttons T1 to T2 for 12 of 18 bit transmission is controlled by Jumper J1, see points a) and b) above.

### d) Channel division; 2 common + 2 private.

To set-up the transmitter to generate 2 common codes (e.g. for a condominium T1-T2) and 2 private users (T3-T4), set SW2 dip 1 and 2 to ON. As the channel division is type 4+6 the first 4 dip of SW1 are for programming the common code and the remaining 6 dip are for programming the private code

The set up of buttons T1 to T2 for 12 of 18 bit transmission is controlled by Jumper J1, see points a) and b) above.

## WARNING

- *The alkaline 12VDC (23A) battery must be changed every year in order to guarantee the correct functioning of the transmitter.*
- *In order to substitute the dead battery remove the plastic cover by sliding it off, take the old battery out and insert the new one taking care to ensure that the polarity corresponds to that indicated on the container.*
- *The used battery must be disposed of correctly in the apt recycling bins.*

The product

### Radio commander TXS 4

Complies with the specifications of Directive R&TTE 99/5/EC.

